

The Petnap Heated Oval Bed with Vinyl Heat Pad is designed to be used with domestic pets in the home

This heated bed provides a gentle heat and will work with the combined heat and body weight of your pet. In free air the heat pad may not feel very warm to the touch. After about 15 minutes of your pet being on the pad the temperature will have risen to around your pet's body temperature, slightly warm than a human's body temperature.

## Important Instructions for use, please read:

You should not be using this item without first reading the instructions. Only use the heat pad for animals.

## **IMPORTANT**

If your pet is unable to move themselves freely from the heated bed, then we would advise you not to use it, an example of this could include (but not limited to) in a veterinary center when a pet is being operated on and generally under some form of anesthetic.

## **IMPORTANT**

As with any heater, if your pet is old, ill or unable to shift position by themselves this includes newborn puppies etc. Please make sure you alter their position regularly this could be as often as every 10 minutes or less.

The heat pad should be kept flat whilst in use and when stored away. If the heat pad becomes folded or rucked up whilst in use you run the risk of hot spots forming on the heat pad, the built-in thermostats can't monitor folded pads.

The heat pad is removable from the bed; DO NOT use the heat pad without the bed fitted.

To reduce surface heat a thin cushion or blanket can be placed inside the heated bed, but don't over load with bedding.

The bed is machine washable at 40°. Do not tumble dry.

The inner heat pad can be wiped down with a mild Milton solution.

Do not immerse the inner heat pad in water or other liquids.

Ensure the heat pad is dry before use.

Do not pull the heat pad by the power cord. Do not use the power cord as a handle.

Inspect the unit regularly to ensure the inner pad is not folded or rucked. Use of the pad whilst folded or rucked could result in hot spots occurring which will damage the heat pad - and invalidate the warranty.

Carefully examine the inner heat pad before each use and discard if the inner heat pad shows any signs of deterioration (such as blistering or cracking)

Ensure the heat pad is completely dry before storage – store flat in a clean, dry place.

We recommend always using in conjunction with an RCD.

The heat pad is CE Approved and has an IPx4 rating.

This bed is not suitable for animals which may chew it.

Technical Specifications: Input: AC 230V 50Hz Output:12V, 20 Watts Return to base Warranty

